


Any page can jump to the Home page,
by pressing the 'Home' icon



To return to the Main Menu,
from any page –
press the 'up' icon



To navigate between pages –
use the 'left / right' icons.

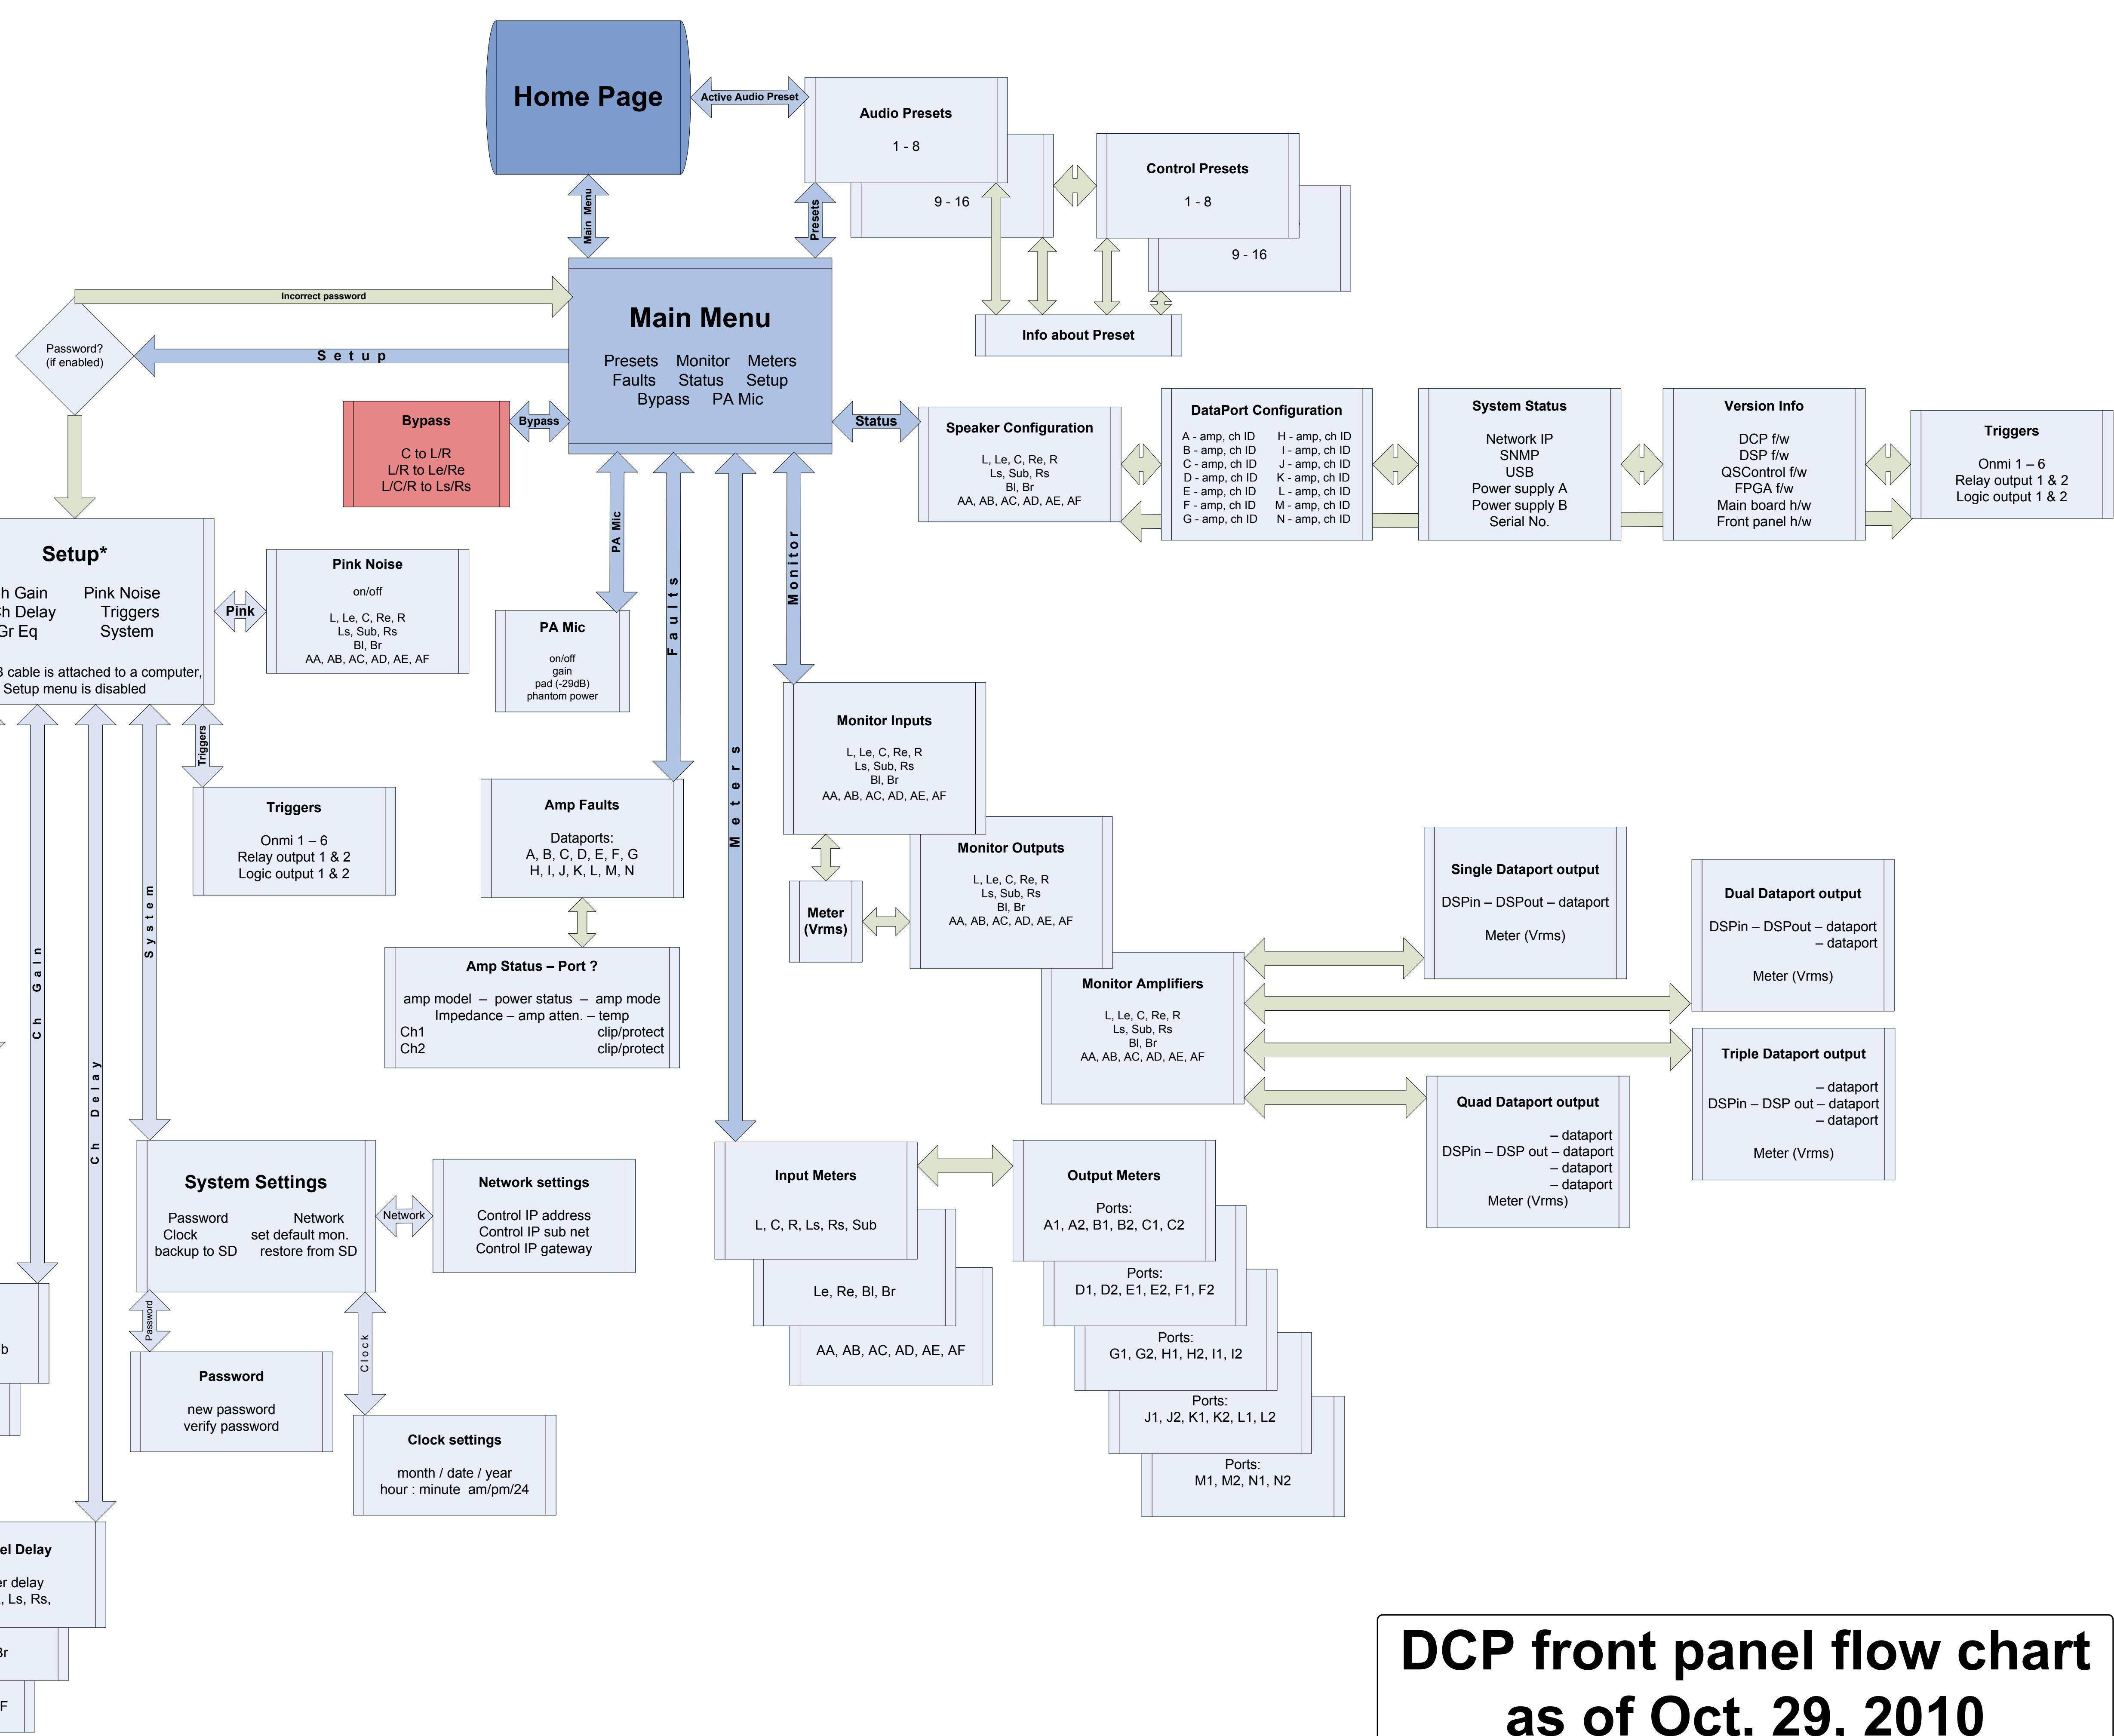

**DCP front panel flow chart
as of Oct. 29, 2010**

Drawn by: SH